
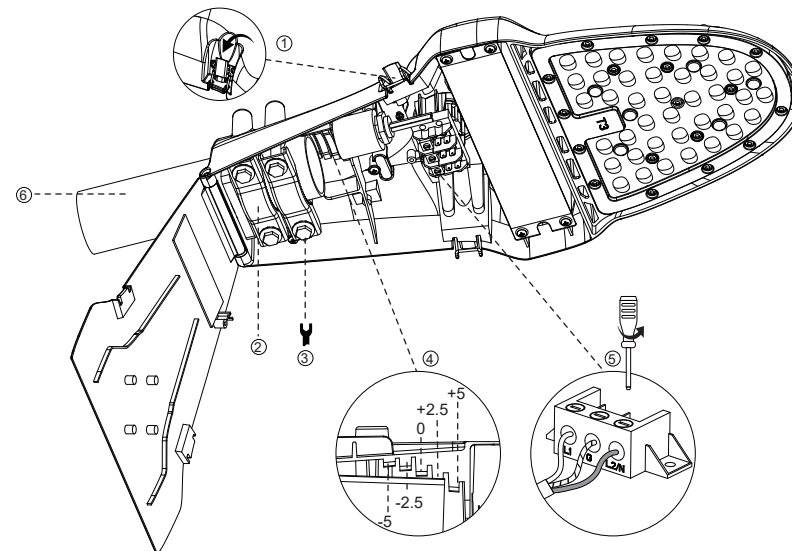



Instructions

Roadway Light

ROADMASTER Series

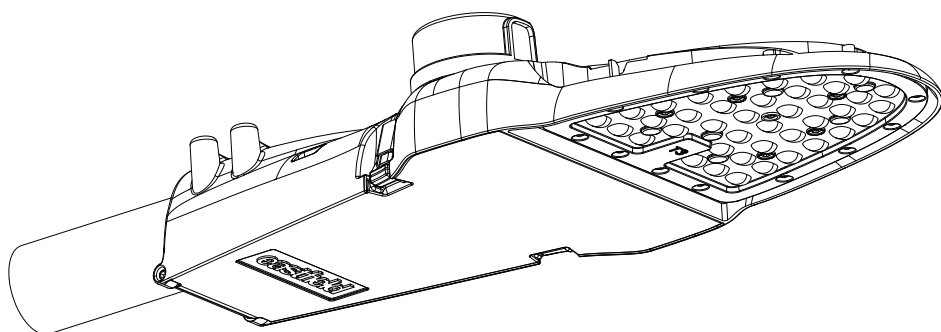


1. ① Open the cover after open two clips.
2. Use wrench to loosen bolts, ② adjust bracket correctly.
3. Slide pole through Insect-resistant plate and bracket to correct angles changes in $\pm 5^\circ$ increments ④.
4. Adjust fixture properly according to inside bubble level, tighten the bolts ③.
5. Insert input cables into the terminal hole correctly, and tighten the screws, fix cables with bundle.
6. Check everything well-installed, close the cover.

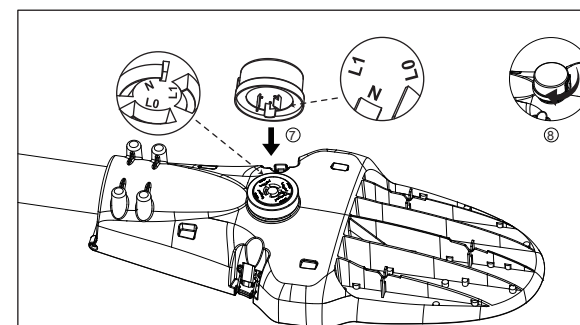

Luminaires with a top-mounted photocell receptacle.

Accessories

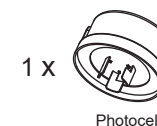

Model	L*W*H	Input(V)	Wattage(W)	Lumen(lm)	Application	CCT(K)	Beam angle(°)	Dimmable	Warranty
ROAD-MASTER	455*190*133 mm	<input type="checkbox"/> AC100-277 50 / 60Hz <input type="checkbox"/> AC347-480 50 / 60Hz	40	6000	Wet location	<input type="checkbox"/> 3000 <input type="checkbox"/> 4000 <input type="checkbox"/> 5000 <input type="checkbox"/> 6500	<input type="checkbox"/> T2 <input type="checkbox"/> T3 <input type="checkbox"/> T4 <input type="checkbox"/> T5	<input type="checkbox"/> NO <input type="checkbox"/> 1~10V	5 year
	80		12000						
	100		15000						
	150		22500						
	200		30000						
	240		36000						



Made in China



DANGER-Risk of shock-Disconnect power before installation.
The light source contained in this luminaire shall only be replaced by the manufacturer or his service agent or a similar qualified person.