

# INSTALLATION INSTRUCTIONS


LED Canopy Light  
100-277 Vac  
DOB-C Series

## IMPORTANT SAFEGUARDS






When using electrical equipment, basic safety precautions should always be followed including the following:

### READ AND FOLLOW ALL SAFETY INSTRUCTIONS

1. To reduce the risk of electrical shock, turn off power supply before installation or servicing.
2. This luminaire must be installed in accordance with the NEC or your local electrical code. If you are not familiar with these codes and requirements, consult a qualified electrician.
3. Verify the availability of necessary tools and incidental material.

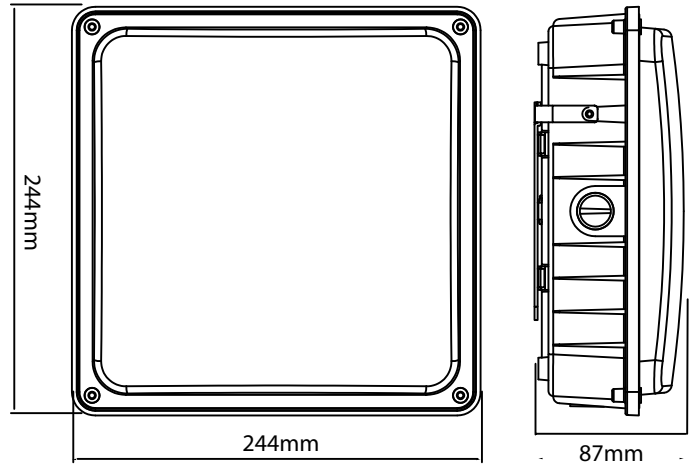

## To Install With Mounting Plate

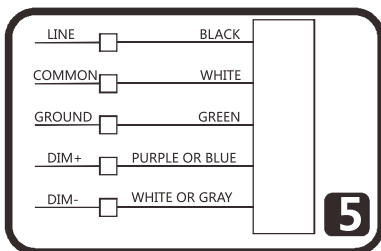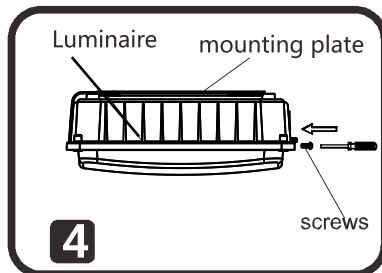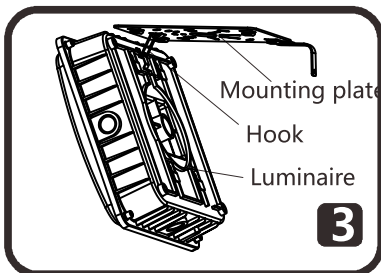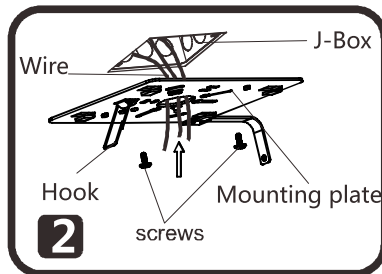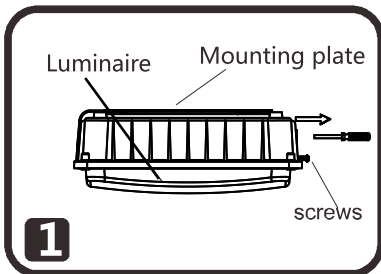

Make the following Electrical Connections to the terminal block:  
1. For 120/277V/347/480 connect the black fixture lead to the voltage supply position of the terminal block.  
2. For 120/277V/347/480 connect the white fixture lead to the neutral supply position of the terminal block.  
3. Connect the green or green/yellow ground lead to the green wire position of the terminal block.  
4. If Dimming is an option; connect the violet dimming positive lead to the supply dimming positive lead, connect the grey dimming negative lead to the supply dimming negative lead.



## LUMINAIRE INSTALLATION WITH MOUNTING PLATE

### STEP 1(Figure 1) :

Remove the **screw** and remove the **mounting plate**.

### STEP 2(Figure 2) :

1. Verify that supply power is off and that the **j-box** is securely mounted within the structural surface.
2. Remove both **j-box** fasteners from **j-box** (set aside for re-installation as needed).
3. Position **mounting plate** over j-box feeding supply wires thru the center of the **mounting plate**. Replace fasteners from step 2 (do not fully tighten).

### STEP 3(figure 3) :

1. hung the **luminaire** on the **mounting plate** with **hook**.
2. Make supply wire (power and dimming) to fixture wire connections as required thru splice access. Universal voltage driver permits operation at 120V thru 277V, 50 or 60 Hz. 0-10V control wires must be rated for 300V minimum. For 0-10V Dimming, follow the wiring directions as shown in figure 5.

### STEP 4(figure 4) :

Install the **luminaire** and fully tighten fastener